
# Integrated Electric Intelligent Ultraviolet Germicidal Lamp System Instruction Manual

### 1. Drawing

#### 1) Installation instructions and lamp replacement

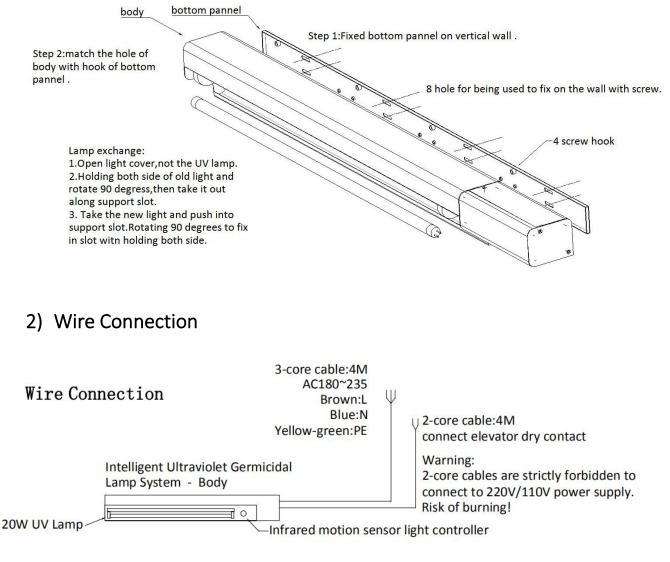

PS: 2-core cable is standard elevator signal wire for ESIC-20E

but not available for ESIC-20W

#### 3) Attention

- (1) Please do not install and connecting wire with electricity.
- (2) Make the light face disinfection area when installing to ensure effect.
- (3) Best install height:2-2.5M from ground.
- (4) Please do not install near air-conditioning and keep it away from sensitive area of temperature to avoid the false triggering of the infrared protection device
- (5) Please do not install it in a place with strong air flow.
- (6) Please do not being under UV light for a long time to avoid injury when adjusting.Pay attention to not directly irradiate the skin, especially eyes. Do not look directly at the light when it is on. As short-wave UV does not pass through ordinary glass, wearing glasses can avoid hurting eyes.Operators should wear long-sleeved clothes and trousers with protective glasses to avoid accidents during installation.
- (7) Serious injury can use eye drop or milk.
- (8) Please ensure cover is on and light is off when changing light. It is strictly forbidden to replace the lamp with electricity. The lampshade and the ultraviolet lamp are turned on and off, please refer to the "<u>4. APP control and setting</u>" in this manual.
- (9) The two-core cable of the ESIC-20E integrated electric intelligent UV disinfection system is the elevator signal wire, which is connected to the dry contact of the elevator relay. The short-circuit state indicates that the elevator is available and the disconnected state indicates that the elevator is on working.

#### 4) Cleaning:

To wipe the light with 95% alcohol gauze when first time using the system so as to remove dust and oil stains. During use, wipe regularly (once a week) to ensure the transmission rate and radiation intensity.

#### 5) lampshade

It is strictly forbidden to manually break the cover, which will break the cover easily and damages the internal precision transmission structure. The cover will automatically open when system is working and be off when done its job. If the power is cut off when the cover is open, it is strictly prohibited to manually break to close it. The cover will be automatically closed to initialize the machine after power restore. If manually operation is needed, please use the mobile phone APP or WeChat applet to operate.

### 2. Operation

- 1) Device will be in self-checking and initialize state when first time operating.Please do not move and run the device in 1 minute
- 2) Indicator:

Green light(blue-tooth working indicator) : flash light while waiting for onnection;

consecutive light after connecting.

Red light(control device working indicator) : flash light while in normal state;

consecutive light when UV is on.

3) Voice report:

Avoid false entering : Do not get into during disinfection.

Expired time : The life of germicidal lamp tube is expired, please replace it.

4) Model:ESIC-20E Integrated Electric Intelligent Elevator Ultraviolet Germicidal Lamp System with elevator signal wire :


Working principle:

Automatic mode : connected dry contact indicates that elevator is available and system starts to work; Disconnected dry contact will stop the disinfection process.

Model : ESIC-20W Integrated Electronic Intelligent UV Disinfection System without elevator signal wire.

### **3. Replacement battery**

There is a button battery inside the machine, which is used to power the time chip, so that the system date and time can be saved and run. Low battery, time will slow down, we need to replace the batteries. Proceed as follows:

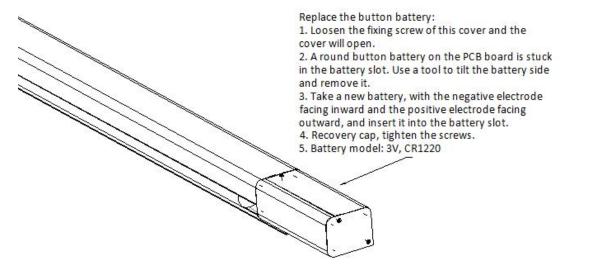

### 4. APP control and setting


1) Obtain the latest APP program and install on the Android Phone.



- 2) Please click on "approve" when first time using App.
- 3) Please clink on UV pattern"Sterilizing Lamp"to enter system on the App page.



4) Enter UV light interface, then it will automatically search the surrounded UV system bluetooth device and choose "UV System".

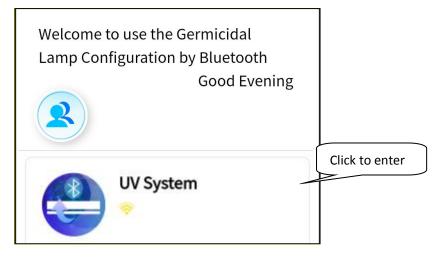


5) Input password

Default password : 1234

Change password : type 4 numbers for password


Reset password : type super password to restore default password

(super password can be obtained from supplier)

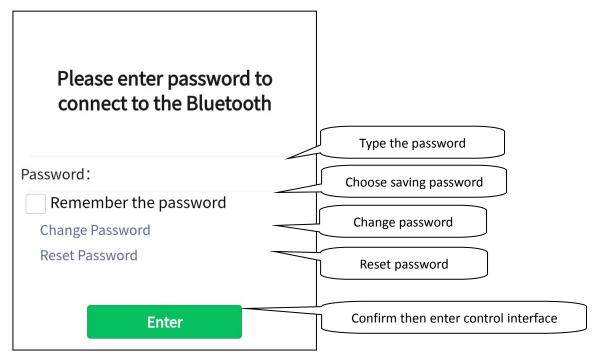


6) Change and reset password

Please type in new password and old password to change password	Please enter the password of Administrator to reset the password
Old Password:	Password:
New Password:	
New Password:	Reset Password
Change Cancel	Cancel

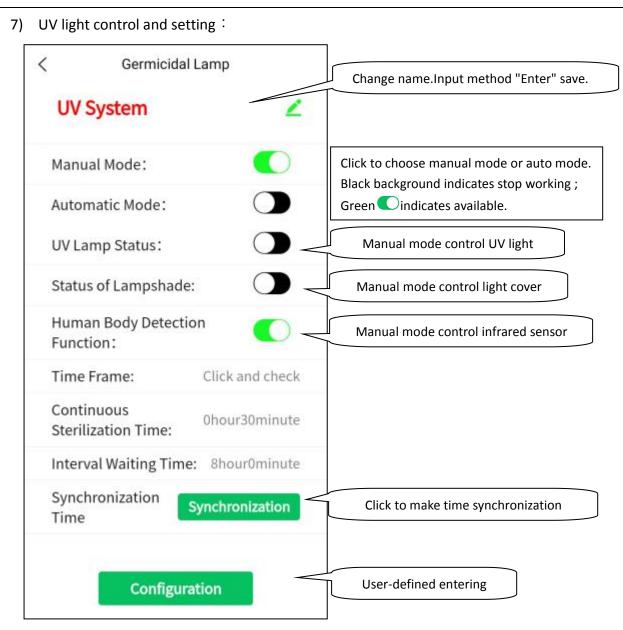


PS:

- After switching the manual and automatic modes, Need to exit this interface. Open it again to see the running status of the new mode.
- If in manual mode, Set configuration, You need to switch to automatic mode for the configuration to take effect.
- For the first use, be sure to synchronize the time, the machine will run more accurately. Every once in a while, time synchronization is also needed to avoid date and time deviations.
- 8) User-defined to set disinfection mode:

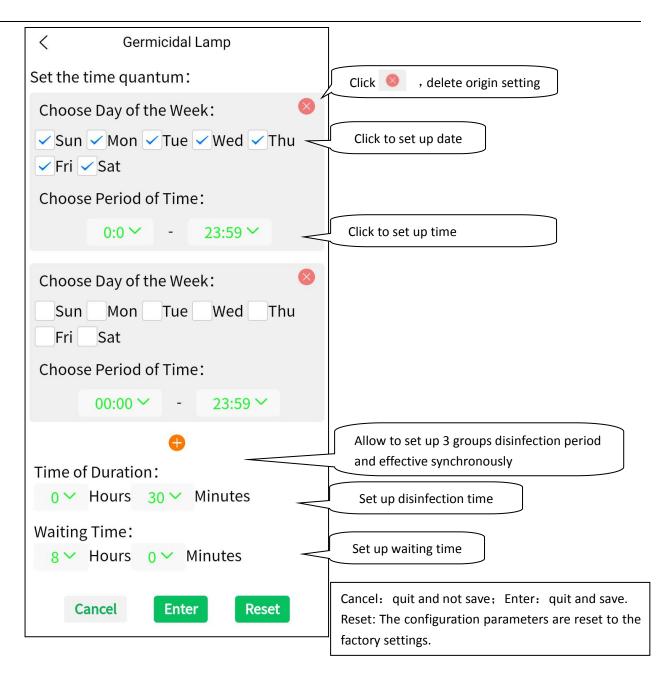

9) Time setting :

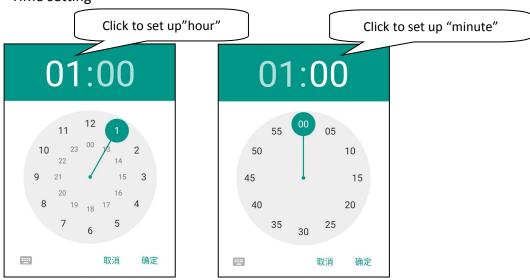

## 5. Copyright

This specification is a guidance on installation and maintenance of UV disinfection system and as a brochure for user, not for selling. Part of function will be adjusted according to technology updating, production process and actual acquirement, it won't be notified. Please contact our engineer if there is any problem about the UV disinfection system. Thank you!

The Company reserves the right of final interpretation of this specification.